



Dirt Devil Infinity VS8 Turbo Teardown Reparatur

repair, screw defective cable reel / retractable cord, the Dirt Devil vacuum disassemble. Cable runs one of its own.


Written By: Sunshineweb



INTRODUCTION


how to split a Dirt Devil infinity. For me, the cable has always pulled in by itself. we will repair the cable reel. The rubber brake is smooth or dry or dusty over time. With a little trick is not more smoothly, but it keeps time finally: D

Step 1 — Remove screws 1-5

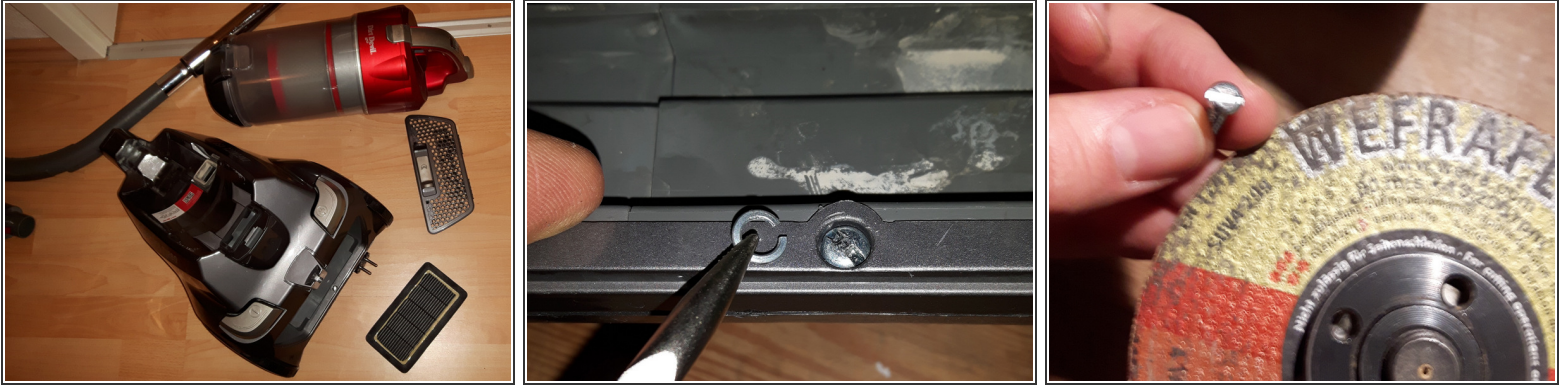

- remove the container, remove at the back of the filter. loosen the screw with a jetty, for example, with a dilated locking ring and chuck. präpararieren or a screwdriver. Flex edit the screw for later.
- On the underside of the vacuum cleaner to remove the 4 with long screws Phillips.

Step 2 — Remove screws 6-7

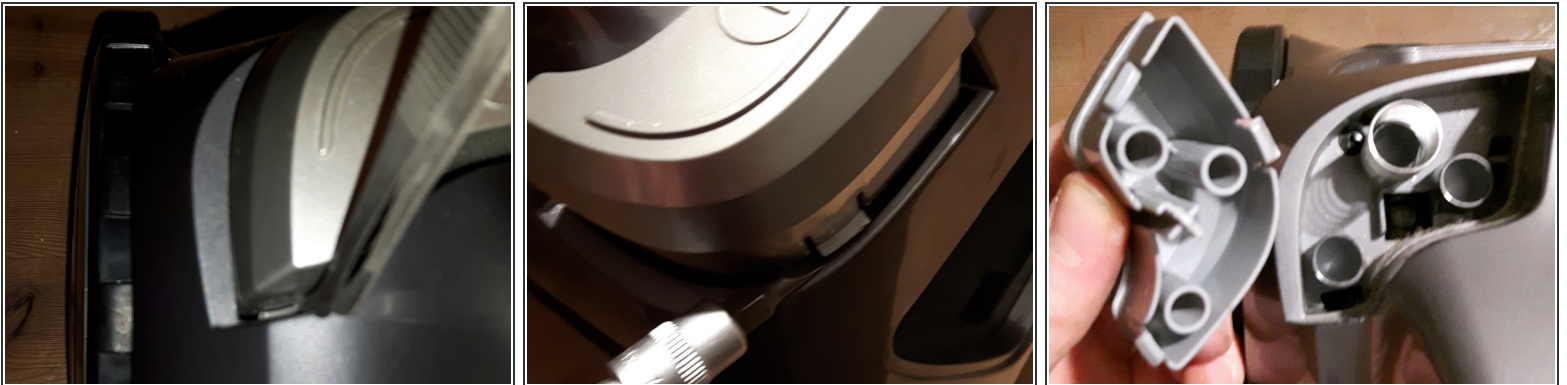


- pry the two push buttons by means of a thin object. there are three hooks.
- then each unscrew the cross bolt.

Step 3 — Remove lid



- The bodice decrease by durchhebelt from front to the rear. when it jammed, check if you have forgotten one of the seven screws.

Step 4 — Remove the cable reel

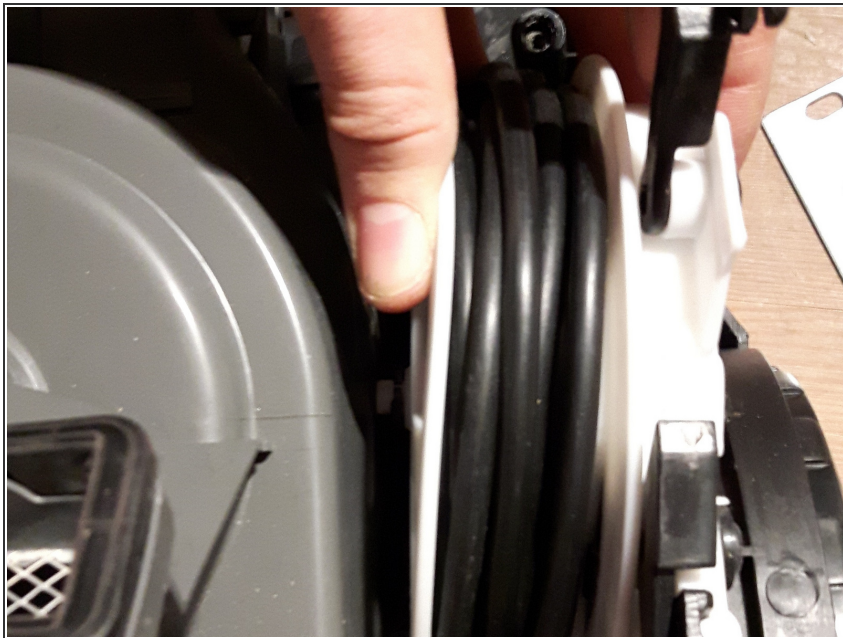

- press lightly cable roll out, and already she comes out.

Step 5 — repair cable reel




- remove red and white Kabelchen if necessary. Loosen the snap ring bottom left of the screen and remove the lever. Plastic bends but does not break. nevertheless caution.
- Since the rubber roller does not intervene, remove it by the black slider to levers with the spring over the white cylinder (bends plastic will not break) and under the jetty out pry the right.
- now remove the rubber roller. Attention unusual. Honey very very thin provides excellent that the rubber grips again. and he would easily be removed with water.

Step 6 — disassemble cable reel



- if you want, you can remove the snap rings and assume the role apart. Please note that the box spring.

Step 7

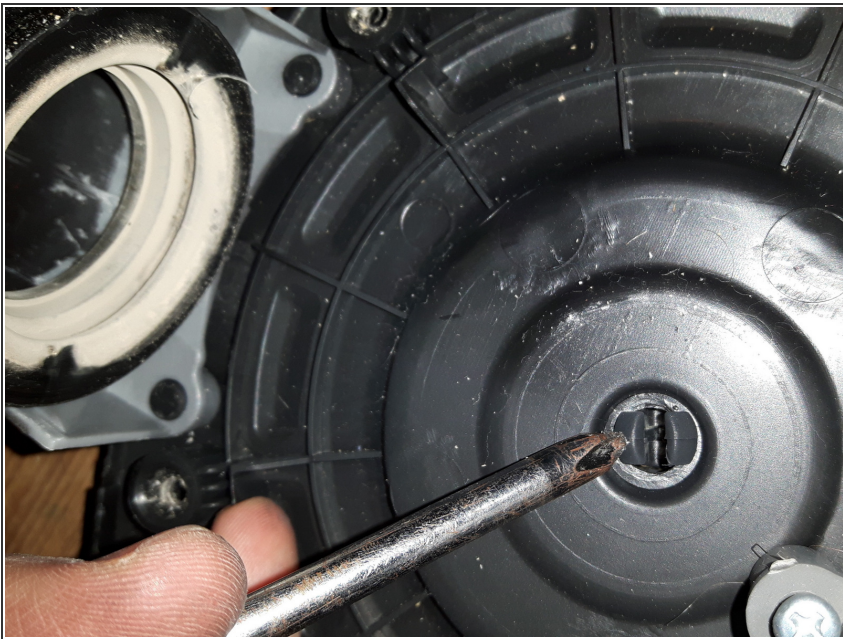

- If necessary, you can remove / replace the castor from the bottom of the vacuum cleaner.

Step 8



- now it can be reassembled.
- I pinched the rubber accidentally went solve careful.

Arbeite die Schritte in umgekehrter Reihenfolge ab, um dein Gerät wieder zusammenzubauen.

